


KOMPRESOR PUMPER 433-25

INDEX:433-25

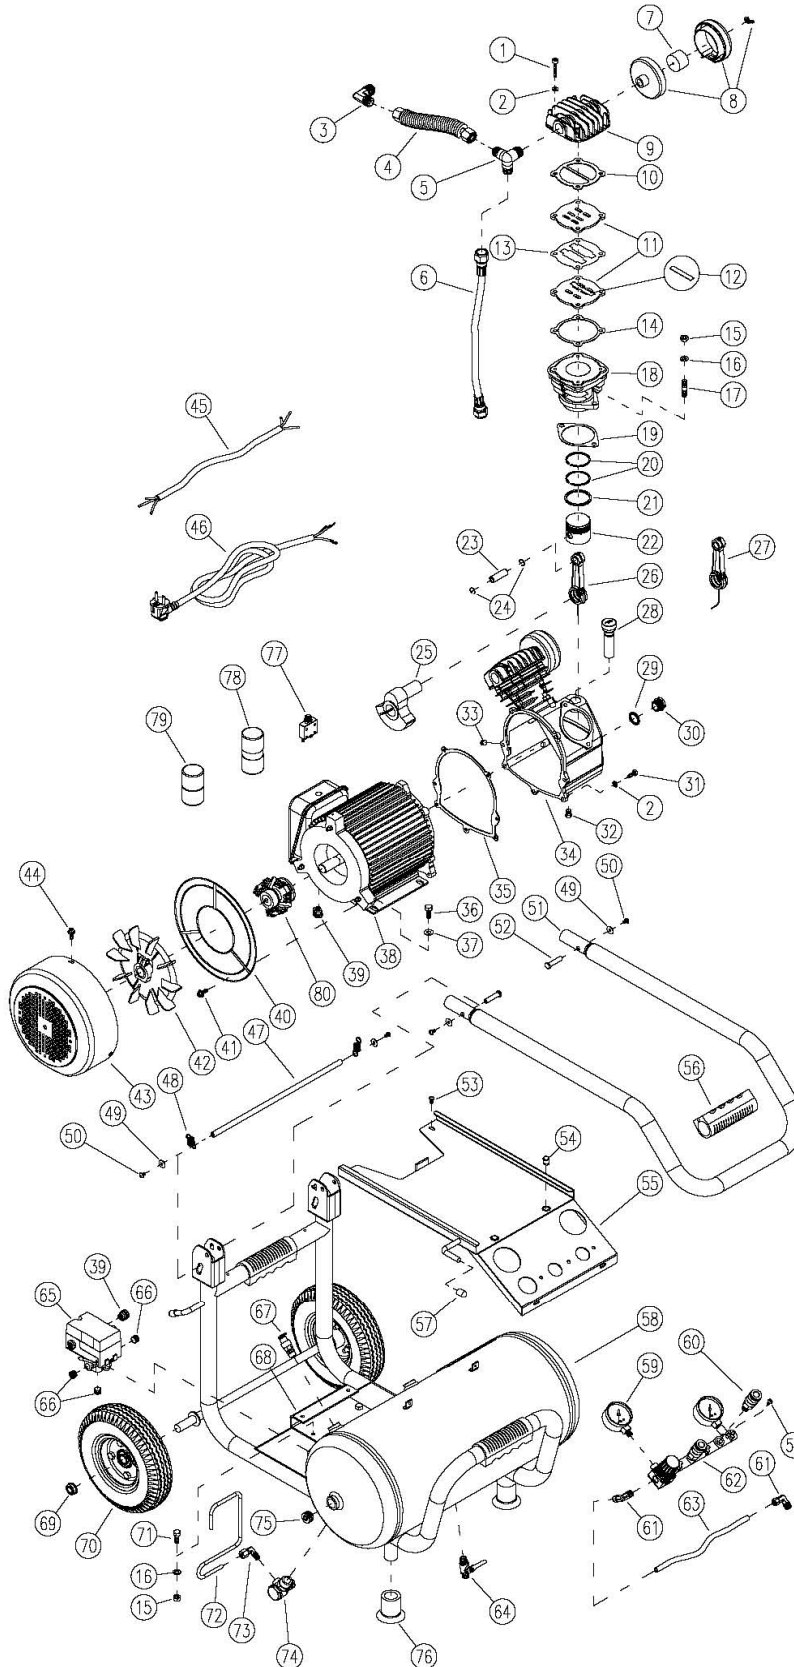

REF. NO.	DESCRIPTION	PART NO.	QTY
1	In six-angle bolt	352087	8
2	Spring washer	382004	15
3	Exhaust elbow	151404	1
4	Exhaust tube set	230036S	1
5	Three way	152401	1
6	Exhaust tube ass'y	242072	1
7	Air filter(element only)	171002	2
8	Air filter	170006	2
9	Cylinder head	101001	2
10	Cylinder head packing	211011	2
11	Inlet & Exhaust valve seat	104005	4
12	Inlet & Exhaust valve plate	125004	4
13	Inlet & Exhaust valve seat packing	212006	2
14	Valve seat packing	213017	2
15	Set nut	371005	8
16	Spring washer	382005	8
17	Double head screw	358001	4
18	Cylinder	201013	2
19	Cylinder packing	214010	2
20	Compression ring	206002	4
21	Oil control ring	207002	2
22	Piston	203002	2
23	Piston pin	204002	2
24	Piston pin snap ring	205001	4
25	Crankshaft	302003	1
26	Rod	316017	1
27	Rod	316018	1
28	Air flue oil filling assembly	324001	1
29	Oil gauge packing	217001	1
30	Oil gauge	321001	1
31	Out six-angle bolt	351043	7
32	Oil draining plug	360001	1
33	Plug	360013	1
34	Crankcase	301003	1
35	Front cover packing	215002	1
36	Out six-angle bolt	351071	4
37	Plate washer	381041	4
38	Motor	251413	1
39	Strain Relief Clip	457002	2
40	safety net	424015	1
41	flange cross bolt	354002	3
42	Radiation fan	431002	1
43	Motor cover	432002	1
44	flange cross bolt	354006	3
45	Cable wire	453002	1
46	Power wire	452024	1
47	Steel bat	405005	1
48	Spring buckle	486004	2
49	Plate washer	381024	4
50	Round-head bolt	365003	7
51	handle	488036	1
52	PIN	405004	2
53	Round-head bolt	365004	4
54	Peah	480454	2
55	Air hose plate	488027	1
56	Rubber handle (1 1/4")	435016-1	3
57	Cup	439008	2
58	Air tank	401163CE	1
59	Pressure gauge	411043	2
60	Quick coupler	447015	2
61	Elbow	151209	2
62	Regulator valve	410014	1
63	Unloading tube	247040	1
64	Drain cock	413008	1
65	Pressure switch	412018	1
66	Plug	360011	3
67	Safety valve	407006	1
68	Base Plate	488010	1
69	Tank wheel nut	403003	2
70	Tank wheel	402007	2
71	Out six-angle bolt	351063	4
72	Unloading tube assembly (1/4")	228070	1
73	Unloading elbow	151002	1
74	Check valve	409004	1
75	Plug	360004	2
76	Tank feet	434009	2
77	Overload switch	458001	1
78	Start capacitor	460011	1
79	Run capacitor	462014	1
80	Centrifugal switch	459016	1